

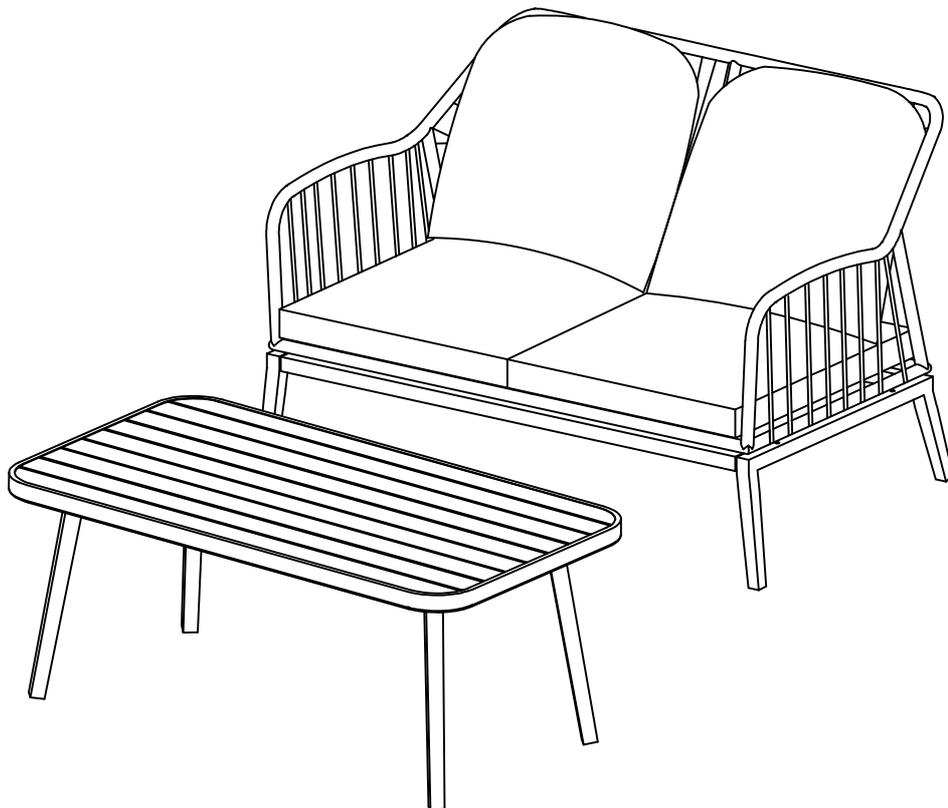
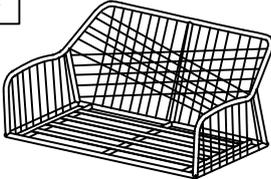
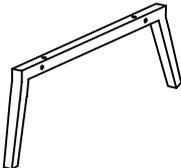
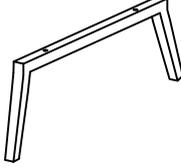


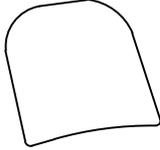


Outdoor Wicker Loveseat & Coffee Table CO7360

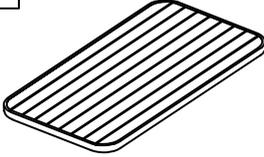

PART LIST


<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 
<p>Seat Panel 1 PC</p>	<p>Left Leg 1 PC</p>	<p>Right Leg 1 PC</p>	<p>Seat Frame 1 PC</p>
<p>E</p> 	<p>F</p> 	<p>G</p> 	<p>H</p> 
<p>Seat Cushion 2 PCS</p>	<p>Back Cushion 2 PCS</p>	<p>Table Top 1 PC</p>	<p>Table Leg 4 PCS</p>

 HARDWARE LIST

<p>#1</p>  <p>1/4 "x0.6 "L</p>	<p>#2</p>  <p>1/4 "x1.4 "L</p>	<p>#3</p>  <p>1/4 "x2 "L</p>	<p>#4</p> 
<p>Short Bolt 16 PCS (Extra 1)</p>	<p>Medium Bolt 4 PCS (Extra 1)</p>	<p>Long Bolt 4 PCS (Extra 1)</p>	<p>Flat Washer 24 PCS (Extra 1)</p>
<p>#5</p>  <p>Allen Wrench 1 PC</p>			


Step1: Lay seat frame (part D) down on a soft flat surface, such as carpet, as shown below. Attach left leg (part B) and right leg (part C) to seat frame (part D) using medium bolts (part #2), flat washers (part #4) and allen wrench (part #5).

Note: Please do not fully tighten bolts until unit is fully assembled.

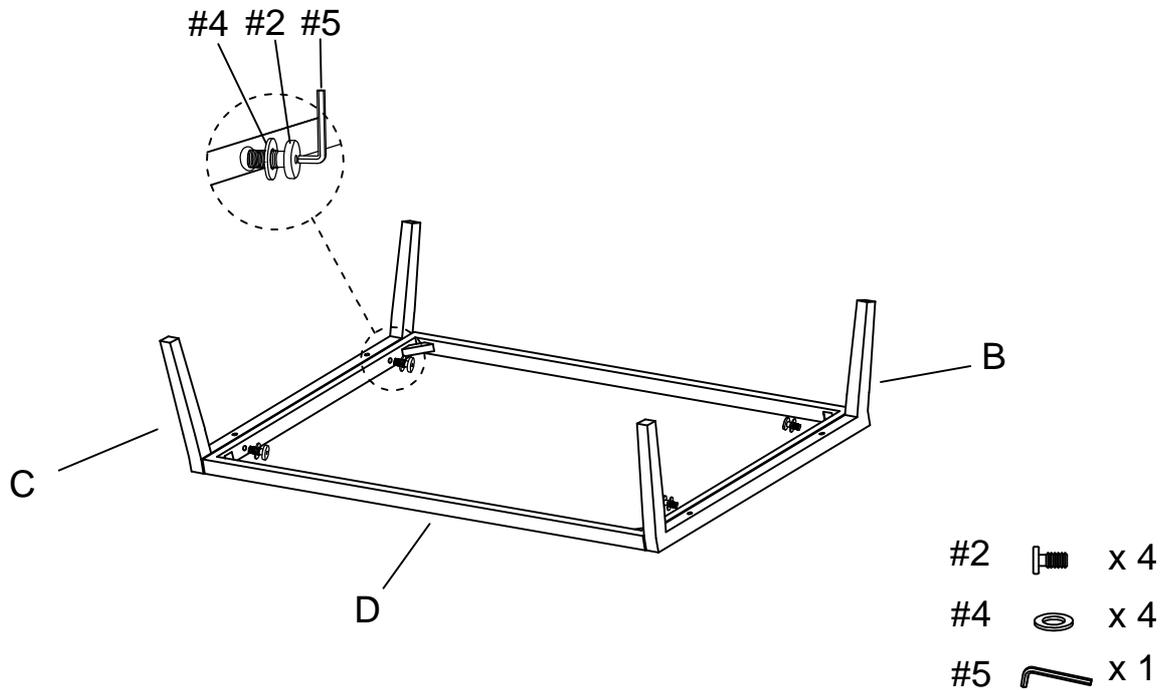


Step 2: Attach left leg (part B) and right leg (part C) to seat panel (part A) using long bolts (part #3), flat washers (part #4) and allen wrench (part #5).

Note: Please full tighten all bolts at this time.

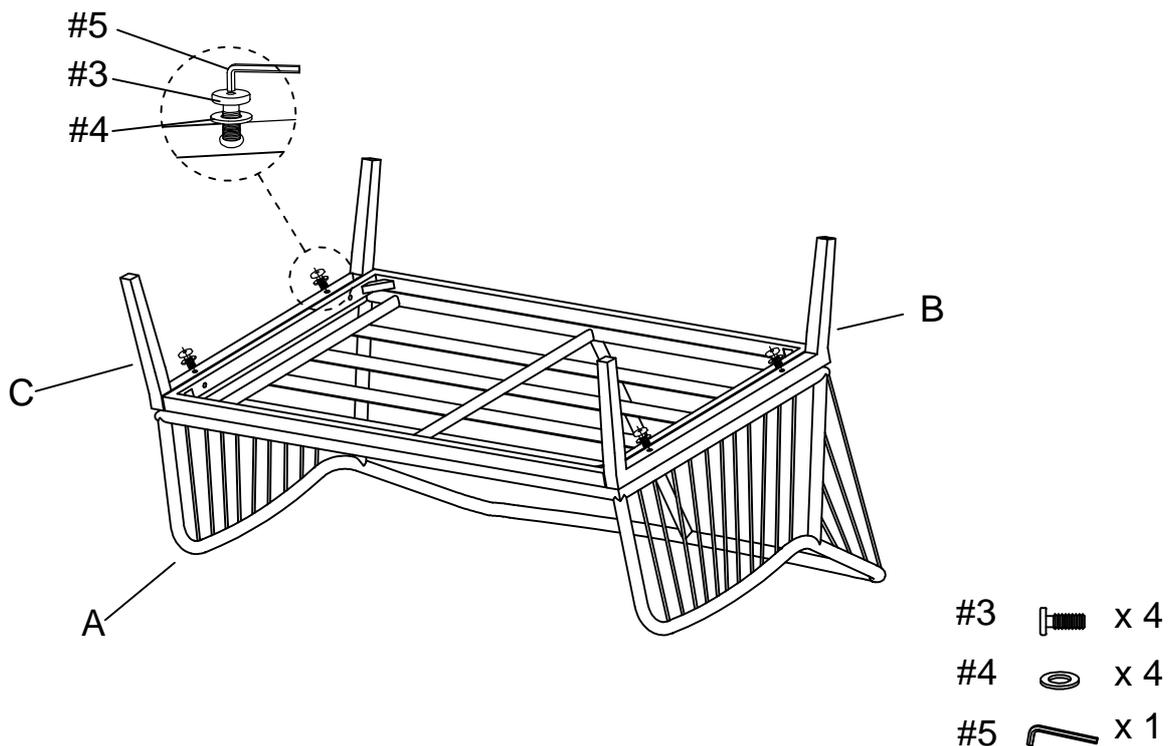


Step 3: Carefully turn the unit upright. Place seat cushion (part E) and back cushions (part F) as shown below.

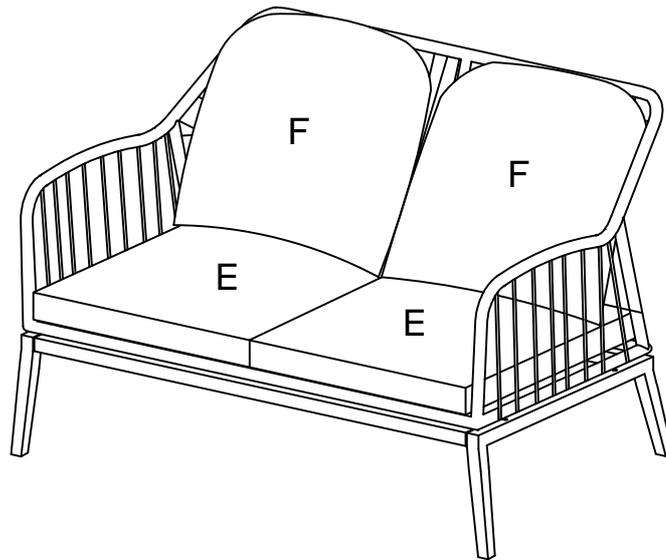

Step 4: Lay table top (part G) upside down on a soft flat surface, such as carpet, as shown below. Attach table legs (part H) to table top (part G) using short bolts (part #1), flat washers (part #4) and allen wrench (part #5).

Note: Please fully tighten all bolts at this time.

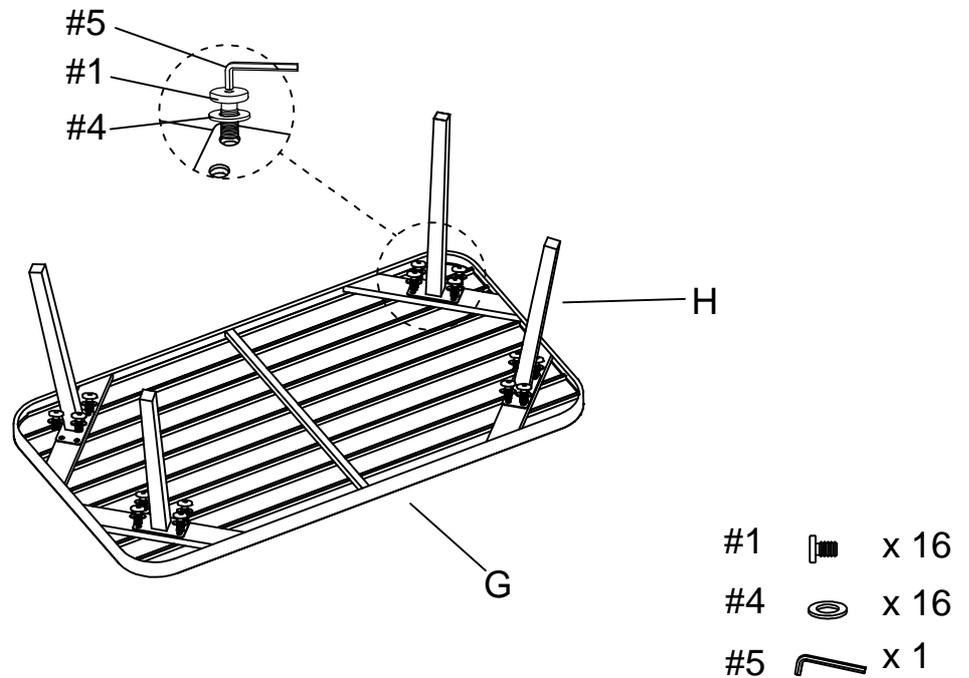

Step 5: Carefully turn assembled unit upright as shown below.

