





ASSEMBLY INSTRUCTIONS for the BLANKET HANDLER (FG-BH) & WHEELS REEL (FG-1B) REEL SYSTEMS

PLEASE READ ENTIRE INSTRUCTIONS CAREFULLY BEFORE PROCEEDING

Four Easy Steps:

If you need additional assistance, contact us at info@feherguard.com or call 905-876-4766 Monday to Friday 8:30 a.m. to 5:00 p.m. Eastern Time.

Before starting assembly, trim cover to clear the inside top edge of your pool to eliminate drag when rolling up cover. Recommended Solar Cover is 12 mil with round bubbles.

Allow an extra 4" (10 cm) on cover length if installing the reel at mid-point or off-center.

REEL SYSTEMS COMPONENTS AND PREPARATION:

Getting started:

Ensure that your system has two cartons consisting of one end carton and one tube set carton.

Tools required for assembly: Safety Glasses Recommended

Portable drill

Tape measure

Pencil and Scissors

Tube Carton Parts List:

2 end tubes and 1 center tube

FG1B Parts List:

2 Wheels 2 Wheel Stops 2 Handles 2 Bearings 2 Plugs for "L" Series Tubesets

Hardware Kit: 10 Strap Plates

10 Straps 10 Plastic Screws 25 Self-drilling Metal Screws

FG-BH Parts List: (FG-BH)

2 End Brackets 4 Casters 2 Handles 2 Bearings 2 Plugs for "L" Series Tubesets

Stainless Steel Screws

Hardware Kit: 10 Strap Plates 10 Straps 10 Plastic Screws 25 Self-drilling Metal Screws

STEP 1: SOLAR REEL PLACEMENT:

- A. Determine the best location for the reel system. The widest point of the pool is the preferred locations (see Fig. 1 below). Small cover extensions may be folded in to avoid using a wider reel.
- B. At the determined location, measure the width of the pool and add 6" (15 cm).







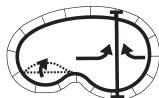


Fig. 1



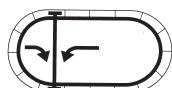

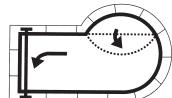

STEP 2: TUBE ASSEMBLY

Configuration for L16M*, L18, L18M*, IG20, L20M* and LC25 Tube Sets

A. Ensure minimum of each end tube is inside center tube (Use Table below right).

Less than minimum insert causes screws to loosen and/or tubes to split.



Insert both end tubes equal distance into center tube and mark on center tube where inner tubes end

Fig. 2

Tube	Min. Insert	Max. Width	Max. Wet Cover Weight	<u>Max.</u> Cover
L16M* L18/L18 IG20 L20M* LC25	12" 12"	16'6" (5.03m) 18'6" (5.7 m) 20'6" (6.3 m) 20'6" (6.3 m) 25' (7.6m)	60# (27.3kg) 60# (27.3kg) 60# (27.3kg) 60# (27.3kg) 75# (36kg)	16x32 18x36 20x40 20x40 25x50

^{*} Mill tubes tarnish over time. Anodized tubes help reduce tarnishing.

STEP 2: TUBE ASSEMBLY - CONTINUED

THIS STEP REQUIRES A TOTAL OF 12 SELF-DRILLING SCREWS DO NOT pre-drill holes or over-tighten screws.

5. Insert Screw 1" (2.5 cm) from

4. FG-HANC

Handle

- B. Lock tubes together by rotating the center tube in the opposite direction to end tube. HOLD TUBES LOCKED WHILE YOU INSTALL FIRST SELF-DRILLING SCREW ON A DRILL LINE, 1" (2.5 cm) back from end of center tube at Location "C1" (see Fig. 3 & 4). If absolutely necessary, a very small "pilot hole" may be drilled.
- C. Place 2 more self-drilling screws at Location "C2" & "C3" 1 screw at every second drill line around tubes (see Fig. 3).
- D. At "D" locations install 3 screws around the center tube at every second drill line, 1" (2.5 cm) back from where you marked the end of the inner tube from Fig. 2A (see also Fig. 3).

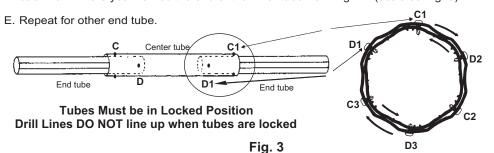




Fig. 4

STEP 3: ASSEMBLE ENDS

Plugs:

1. FG-PLG (31/2" diam. Tube

OR

1. FG-PLGL

"L" Series)

FG-BH PLACE LONG SIDE OF

SECTION OF COVER.

TRIANGLE TOWARD LONGEST

(3" diam. Tube,

Assemble in numerical order (see Fig. 5 or 6):

• Insert Plug (#1) into End Tube. (Use the 2 plugs with appropriate

- Place Bearing (#2) inside End Bracket or Wheel (#3).
- Push Handle (#4) through Bearing and into Plug.
- Insert 1 self-drilling screw (#5) through tube in line with bump on plug rim (Long Prong) and 1" (2.5 cm) from tube end. (see Fig. 7).

5. Insert Screw 1" (2.5 cm) from

3. End

FG-CK1

Fig. 6

Bracket

tube end (See Fig. 7)

Repeat for other end.

diameter for your tube.

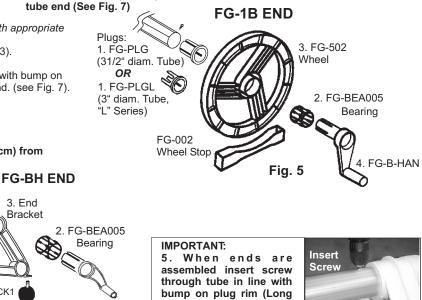


Fig. 7


STEP 4: STRAP ATTACHMENT

FG-CK1

Insert Casters

Attach a Strap Plate to one end of all Straps provided (see Fig. 8).

All Straps should grab Blanket at the same time. Adjust strap length at the Strap Plate if necessary.

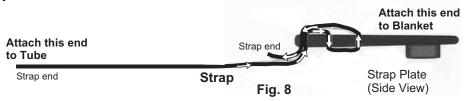

Prong), 1" (2.5 cm) from tube end - at BOTH ends.

STRAP ATTACHMENT - TO TUBES

A. Mark each End Tube 6" (15 cm) in from the inside edge of pool top edge (or at the start of a radius corner) (see Fig. 9) The first 2 Straps will be attached at these outside marks on a Drill Line. The remainder of the Straps will be spaced evenly - on Drill Lines - between the outside 2 Straps.


Mark all Strap locations before installing. Use all Straps provided. Note: Maximum distance between straps is 30"

B. Attach Straps to Tubes at the marks with a Metal Screw directly through the strap material and on a Drill Line approximately 1" back from the end of the strap (see Fig. 10). DO NOT pre-drill holes or over-tighten Screw.

Space 10 strap plates evenly between outside marks 6" (15 cm) Square corner Radius corner

First strap plate is placed 6" (15 cm) in from inside edge of pool or at start of radius corner. Place system across widest point of pool if radius corners are greater than 6".


Fig. 9

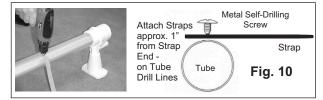

STRAP ATTACHMENT - TO COVER (Solar Blanket)

C. Choose **EITHER** Fig. 11 **OR** Fig. 12 - based on your pool shape. If you have determined a mid-pool or off-center placement, it will be easier if you move the cover away from the pool and fold it (bubbles in) on a flat surface.

For Systems Placed at Pool End (Rectangular Pools) (Fig.11)

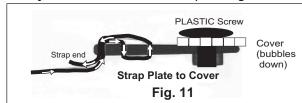

Pierce hole through cover, 1" (2.5 cm) back from edge of cover and straight down (perpendicular) from a strap already attached to tube. Push threaded plastic screw through hole in cover then tighten snugly into plate. Repeat for remaining straps.



For Systems placed at Mid-Pool or Off Center (Round, Oval or Irregularly Shaped Pools) (Fig. 12)



Fold cover where system will be placed (bubbles in). Pierce hole through both sides of cover, 1" (2.5 cm) back from the fold and straight down (perpendicular) from a strap already attached to tube. Push threaded plastic screw through holes in cover then tighten snugly into plate. Repeat for remaining straps.



D. When you start to roll up the cover, all straps must take hold of the cover at the same time. Adjust the strap lengths at the strap plate if necessary.

Safe Use of Your Solar Reel:

Solar Reel systems are designed solely to remove solar covers and are not made to support people or any other weight. Solar covers must be completely removed before entry into the pool. Under no circumstances, should one swim in a pool partially covered with the solar cover.

Care and Storage:

- 1. Check screws periodically and tighten, if necessary. The solar reel may be stored outside for the winter.
- 2. It is not recommended to disassemble it for storage inside.

In order to protect the warranty on your solar cover, it is essential to use a protective cover when the it is rolled up on the reel. In the summer use a White Sheet with UV inhibitors and in Winter, a Winter Jacket. If not provided, they can be purchased from your pool retailer.



HV-WCR

FeherGuard Accessories available through Pool Retailer:

FG-FASKIT	Tube & Blanket Fastening Kit (10 sets tube & blanket fasteners & 10 - 26" straps / package)
FG-PFS	Tube & Blanket Fasteners (10 sets / package)
FG-RS26	Reel Strapping (10 - 26" Straps / package)
FG-RS50	Reel Strapping (1 Roll 50' Strapping / package)
FG-MPR	Mid-Grip Pull Rope (helps pull Solar Blanket on to Pool - 35' Rope, 2 clips, 2 plates, 2 fasteners / package)
FG-WPS	White Protective Sheet with UV Inhibitors (Wrap to protect solar blanket on the reel 24' x 3 1/2' / package)
FG-BS2X6	Blanket Straps (secures rolled up Solar Blanket on Reel - 2 x 54" straps with buckles / package)
FG-CK	2" Locking Casters (set of 4 / package)



Five Year Warranty:

FeherGuard warrants for a period of five years from the date of delivery to the original consumer purchaser, that the Blanket Handler or the Wheels Reel Solar Cover Reel System shall be free from defects in workmanship or material under normal use and in accordance with FeherGuard's written installation and use instructions. FeherGuard at its option shall supply free of charge any part found to be defective in workmanship or material.

Any implied warranties are limited in duration to the five-year period from the date of delivery to the original consumer purchaser. Excluded from this warranty are all consumables (bearings, straps, strap plates, screws). Tarnishing or discoloration of mill aluminum tubes can occur. This is not a warranty issue as tarnishing does not affect tube performance or integrity.

This Warranty is void if there is evidence of purchaser abuse, improper installation or normal wear.

FeherGuard will not be liable for incidental or consequential damages resulting from any defects in workmanship or material. Some States/Provinces/Countries do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitations or exclusions may not apply.

This Warranty gives the claimant specific legal rights. The provisions of this Warranty are in addition to and not a modification of or a subtraction from the statutory warranties and other rights and remedies contained in applicable local legislation.

To validate Warranty, return this registration form within 30 days of purchase. You may also register your warranty online on our Home Page at www.feherguard.com.

FeherGuard Products Ltd. 3153 Steeles Avenue West #5 Milton, Ontario CANADA L9T 2V4

Specifications subject to change without notice.

01 16

Thank you for buying the Blanket Handler or the Wheels Reel Solar Cover Reel System. We know it will make solar cover handling easy for you.

FeherGuard "Five Year" Warranty Registration	Please Print	_
PURCHASER:	077	
ADDRESS:	CITY:	
STATE/PROVINCE/COUNTRY: FG-1B or FG-BH	ZIP/POSTAL CODE:	
(circle emp)	ORE LOCATION PURCHASE DATE	