

GRAND EFFECTS

Fire-Water Bowls

Model 100

OWNER'S MANUAL / OPERATING AND MAINTENANCE INSTRUCTIONS

For your safety:

If you smell gas:

1. Shut off gas to the appliance
2. Extinguish any open flame near unit.
3. If odor continues, immediately call your gas supplier

For your safety:

Do not store or use any gasoline or other flammable vapors and / or liquids in the vicinity of this or any other appliance.



This manual should remain with the homeowner or parties responsible for operation.
(Rev C)

Table of Contents

Gas and Electrical Requirements	Page 3
Installation	Page 3
Burner Setup and Adjustment	Page 8
Maintenance	Page 9
Operation	Page 10
Control Panel Wiring Diagram	Page 12
Burner Assembly Wiring Diagram	Page 13

1.0 Gas and Electrical requirements:

- | | | | |
|-----|-----------------|--|----------------|
| 1.1 | Input Voltage: | 120 Vac / 60 Hz to Grand Effects Control Panel | |
| 1.2 | Output Voltage: | 24 Vac | |
| 1.3 | Gas type: | <u>Natural Gas</u> | <u>Propane</u> |
| 1.4 | Gas Pressure: | Nominal: 7" wc | 11"wc |
| 1.5 | Water Flow: | 10-12 gpm | |
-
- | | | | |
|-----|-----------|----------------|------------------------|
| 1.6 | Gas flow: | 1 Bowl system: | 60,000-80,000 btu/hr |
| | | 2 Bowl system: | 120,000-160,000 btu/hr |
| | | 3 Bowl system: | 180,000-240,000 btu/hr |
| | | 4 Bowl system: | 240,000-320,000 btu/hr |

Note: Check with your gas supplier to verify gas flows and pressures available at the location of your installation. In many cases utility companies will install larger meters at no charge to accommodate larger flows.

2.0 Installation

Warning: This unit is for outdoor use only
Recommended CSA/AGA Clearances: Sides 4 ft/Top 6ft

- 2.1 Do not install near any combustibles such as wood structures, fuels, clothing, fabrics or dry vegetation.
- 2.2 Install Bowls well out of the way of pedestrian traffic.
- 2.3 Installation shall be performed by a licensed contractor. All aspects of installation must conform to local or national codes, or in the absence of codes, with Natural Fuel Gas Code ANZI Z223.1.
The Control Panel and approved gas valve shall be located where they can be easily accessible so that the gas can be shut off quickly in case of an emergency.
- 2.4 Install the Control Panel and gas piping as shown in Fig. 1 (Natural Gas) or Fig. 2 (Propane Gas) or Fig.3 (Commercial Installation).
- 2.5 Note that propane piping is different than natural gas (shown in Fig. 1 and Fig.2).
- 2.6 The gas piping shall be installed underground between the Control Panel and each Fire Bowl as shown in Fig. 1. The piping shall be reduced to 1/2" NPT or larger at each bowl as shown in Fig. 4.
- 2.7 Low voltage wiring (14 or 16 ga. 24Vac) shall be installed underground between the Control Panel and each Bowl. Wire per Grand Effects wiring diagram. 120 v source into Control Panel can come from any 120v source, including pool controller or home system.
- 2.8 Maintain good piping practice by keeping pipe length and elbows to a minimum to eliminate unnecessary pressure drops. Corrugated flex gas lines should not be used.
- 2.81 Gas and electric should be centered in middle of column.
- 2.85 On commercial installations, it is recommended to install a keyed switch and kill switch located in close proximity and in visible sight of feature or features. The keyed and kill switches are supplied by others.

Note: The gas and electrical and water connection at each Bowl must be located at the center of each Bowl. The connections must be installed as shown in Figure 4.

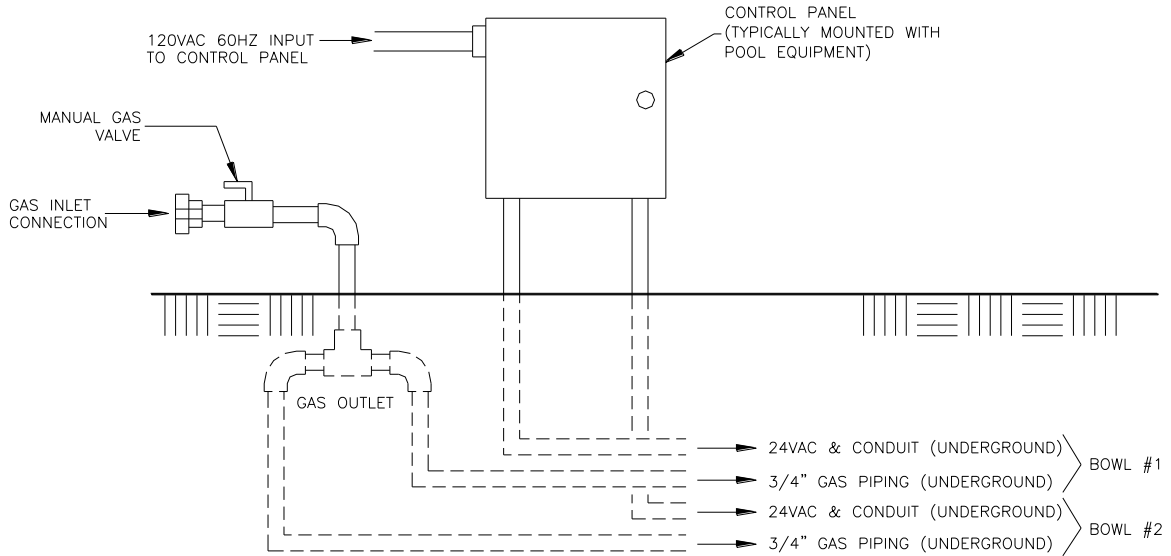


Fig. 1 (Natural Gas)

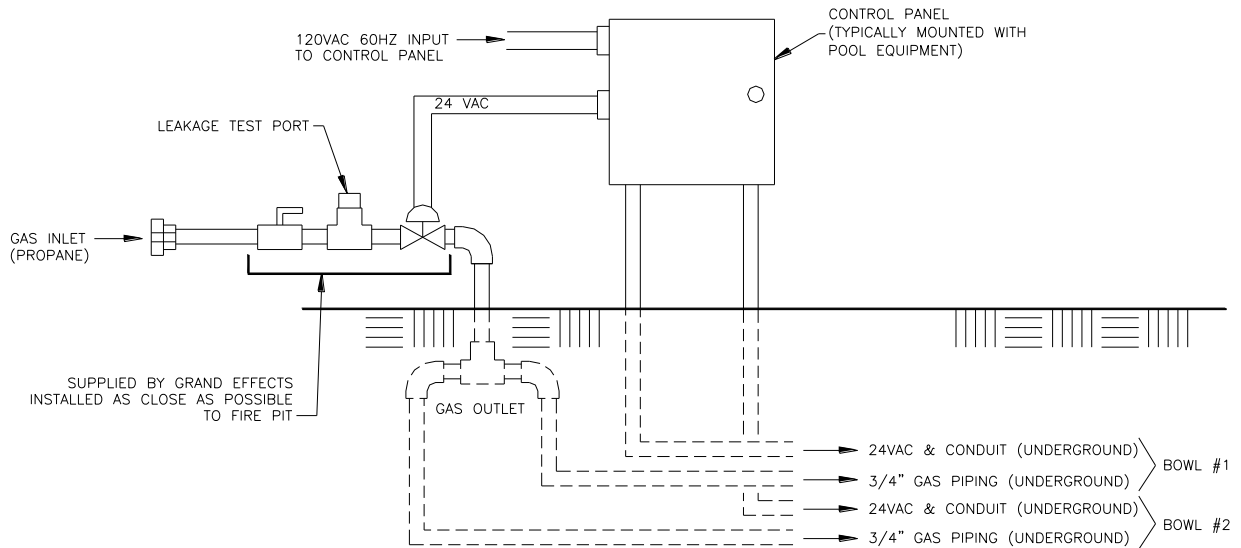


Fig. 2 (Propane Gas)

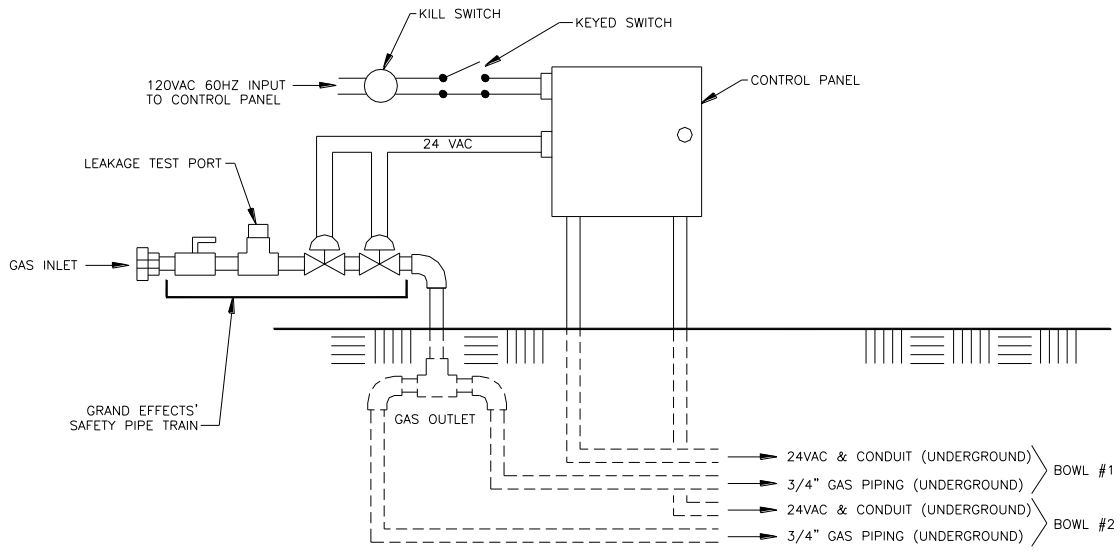


Fig. 3 (Commercial Installation)

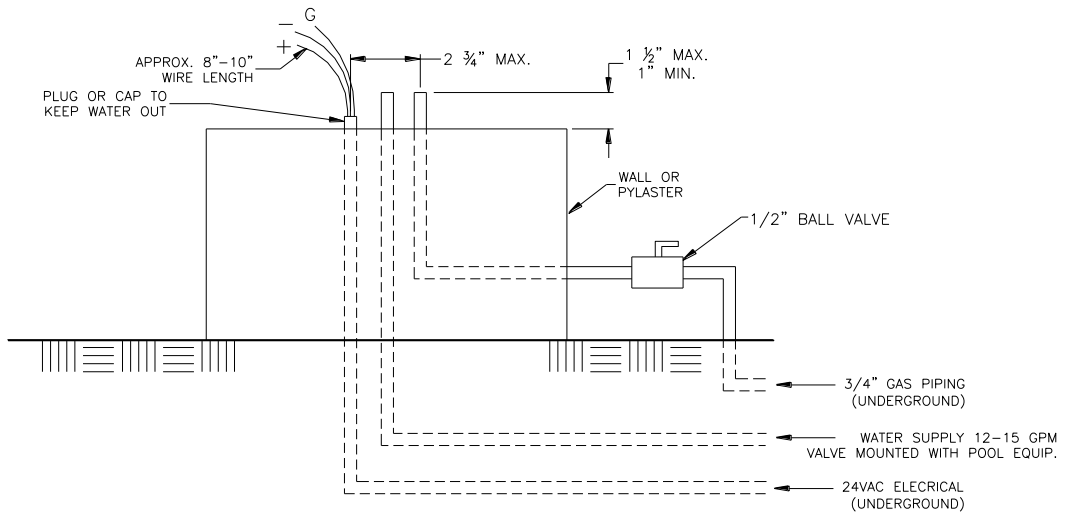


Fig. 4

Important: The Mounting Bracket must be installed for proper cooling of Burner Assembly. Warranty is voided if bracket is not installed.

Note: Do not caulk or seal around the base of the Bowl.
(See Fig. 10)



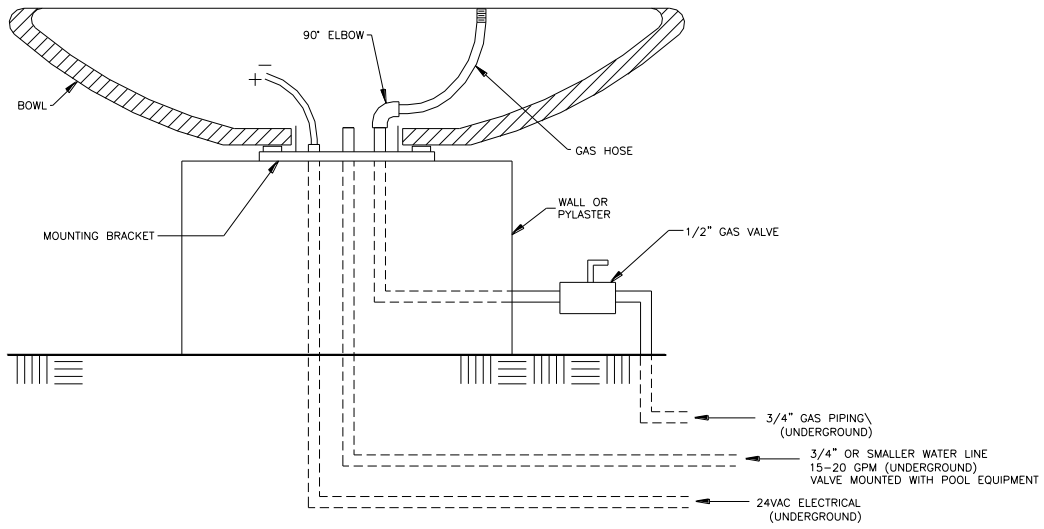


Fig. 5

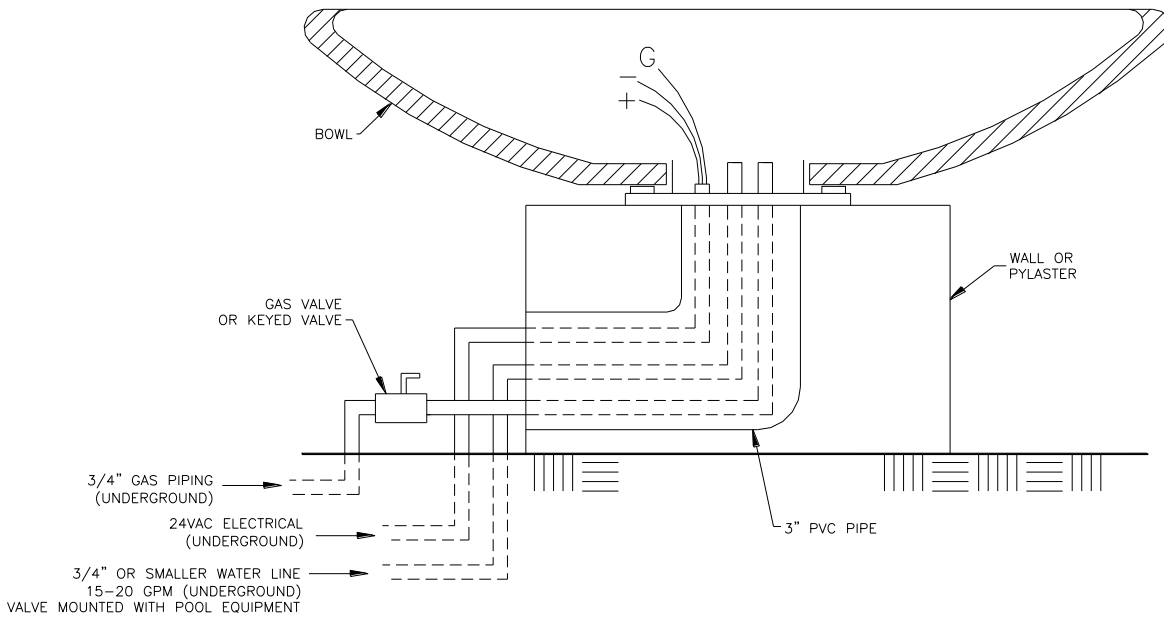

Optional Drain Orientation-Prevents Dirty Water From Draining Out on Wall

Fig.6

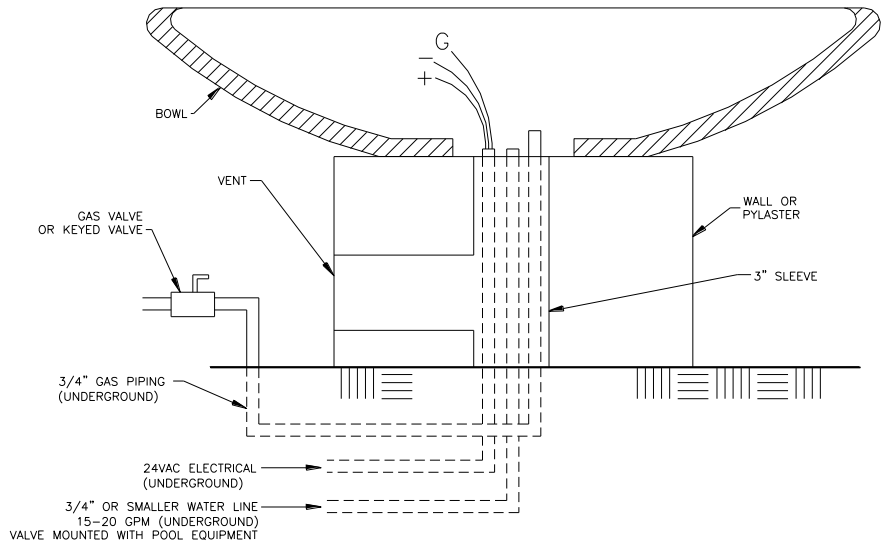

Optional Mounting Method With Out Mounting Bracket

Fig. 7

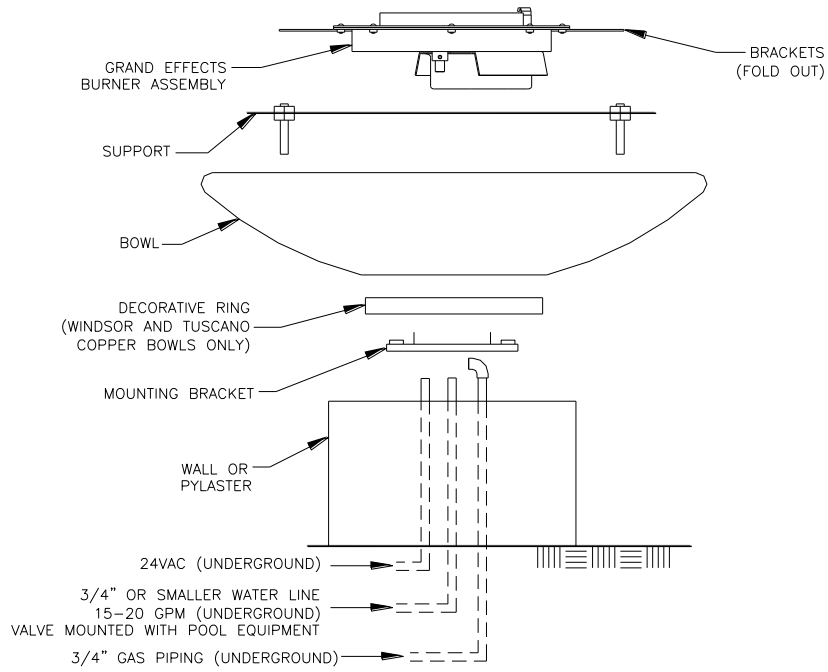


Fig. 8

3.0 Burner Setup and Adjustment

- 3.0 At the Control Panel, turn the manual gas valve to the “Off” position.
- 3.1 With 120Vac coming into the Control Panel, turn the burner switch “On”.
- 3.2 At each Burner Assembly, check that the spark electrode is arcing across to the pilot hood. You should be able to hear and see the electrode spark. If there is no spark, make sure that the Burner Assembly is receiving 24vac from the Control Panel. Check that the Main Gas Adjusting Valve is in the full open position. It is located on the bottom of the Burner Assembly as shown in Fig. 7.
- 3.3 Reposition Burner Assembly so that it is sitting level in the Bowl.
- 3.4 At the Control Panel, open the Manual Gas Valve.
- 3.5 In the Control Panel, turn the Burner switch to the “On” position.
- 3.6 After all Bowls have been lit, they can now be adjusted for flame size.

**Important : At this time the corresponding Fire Bowl should ignite.
If Burner does not light, it may be a result of air in the gas line.
If this happens, carefully purge the air from the gas line.**

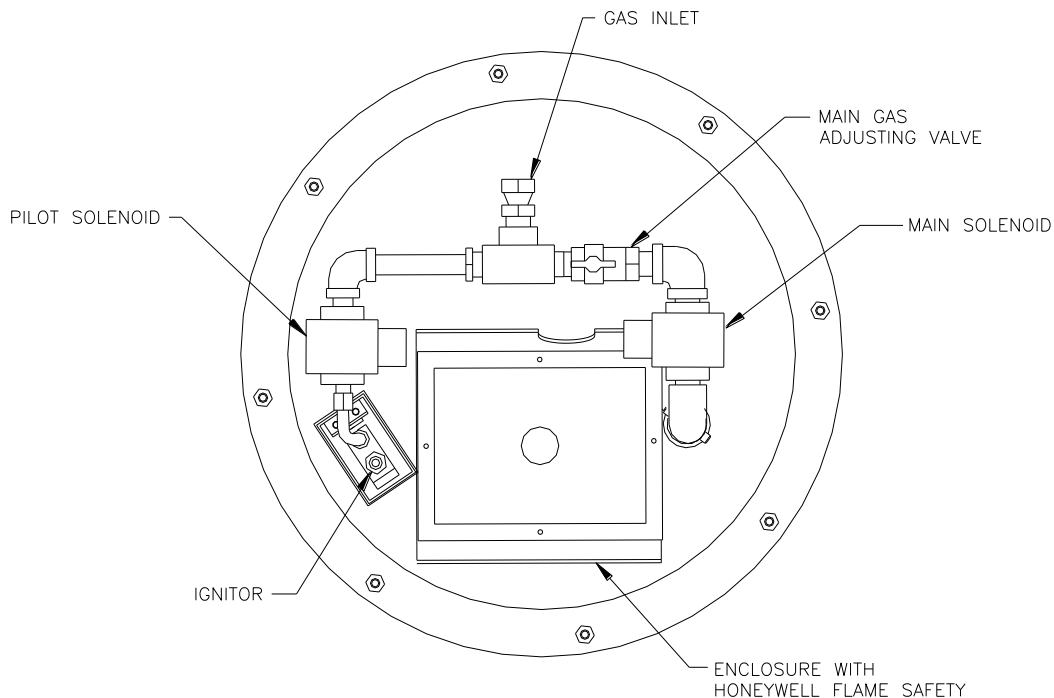


Fig. 9
(View is from bottom side of Burner Assembly)

Burner Adjustment

Note: Each Burner should have a flame height of approximately 12" – 15" from the top of the Bowl.

- 3.70 The height of the flame can be adjusted at each Burner by opening or closing the ½" Gas Valve or Keyed Valve as shown in Fig. 4.
- 3.75 Each Burner should be adjusted as required so that the flame size at each Bowl is similar in appearance to each other.
- 3.80 After all Burners have been adjusted, make sure that the Burner Assembly is repositioned so that it is sitting level in each Bowl.
- 3.85 Install decorative rock or glass on top of the "Burner Support" and Burner Assy. Larger lava rock is recommended (2"-4" in size). It will work better than smaller rock. Make sure that all rock is clear of the pilot area and hood area. Pilot Hood area needs to remain clear of rock for proper ventilation.
- 3.90 Note: Do not use glass with propane installations. (If you use glass, you will need to lay down stainless screen to prevent glass from falling through-please consult Grand Effects Glass Install Manual. If you use 1/4" pieces of lava it should be treated as a glass installation).

Important: Both sides of Pilot Hood need to be clear of rock for proper ventilation and operation. Do not use Fire Glass with propane installations.!!

4.0 Maintenance

- 4.1 Periodically clean the Burner Assembly and Bowl with a wet cloth or cleaning solution to remove carbon build-up.
- 4.2 Frequency of the cleaning will depend on usage.
- 4.3 Frequently inspect the gap between the base of the Bowl and the Mounting Bracket. It should be kept free of dirt and debris that may restrict cooling air and drainage. See (Fig. 10)
- 4.4 Periodically inspect the underside of the Burner Assembly for any signs of excessive temperatures.
- 4.5 Check that all gas connections are tight.
- 4.6 The units should be cycled frequently (especially after a rain). The Burner Assembly will not work in snow and ice conditions. The Burner Assembly should be covered and protected from snow and ice. The Burner should not be operated in high wind conditions. High winds can limit the cooling air required for cooling of the Burner Assembly and cause over heating of the electronics.

Important: The System needs to be turned on/off after a rain to remove any water in the pilot area.

Note: If any problems are present, consult a licensed heating Specialist or call Grand Effects.

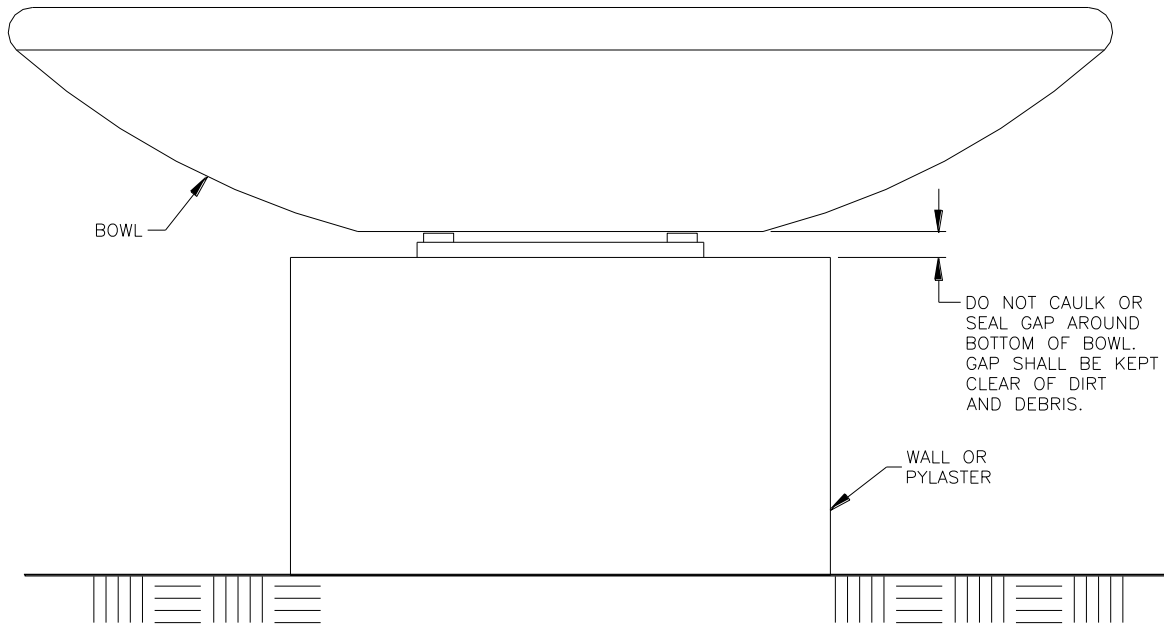


Fig. 10

5.0 Operation

Warning: This unit is for outdoor use only

For your safety:

1. If you smell gas, shut off Gas Valve immediately.
2. Extinguish any open flame.
3. If odor continues, immediately call your gas supplier.
4. Do not store or use gasoline or other flammable vapors and / or liquids in the vicinity of this appliance.
5. Do not leave flame on while unsupervised.
6. Do not operate in windy or rainy conditions. If this is done, unit will cycle on and off automatically.
7. Unit should be operated only by a responsible adult.
8. When in use, an open flame is present, therefore, use with extreme care and at your own risk.
9. Before any inspection of the unit, always turn off power and gas supply at the Control Panel.
10. If you experience problems with this unit, call Grand Effects or a licensed heating professional. All work on this unit shall be performed by a licensed heating professional.

Caution! Before you turn on the Grand Effects System, make sure that features are clear of people, animals or any objects that are combustible.

Operating Instructions:


To turn unit "On":


1. Open manual gas valve.
2. Turn Burner Switch "On".

To turn unit "Off":

1. Turn Burner Switch "Off".
2. Close manual gas valve.

Note: If Burner fails to light, turn corresponding Burner Switch in the Control Panel to the "Off" position then to the "On" position. This will initiate a new trial for ignition.

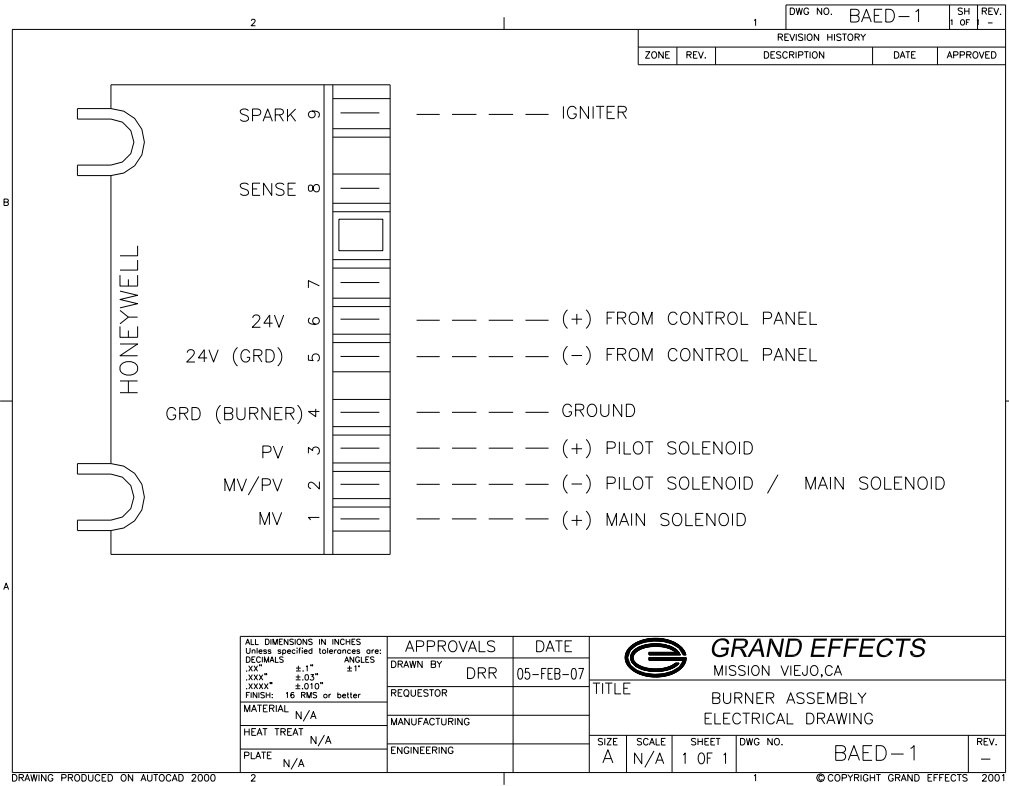

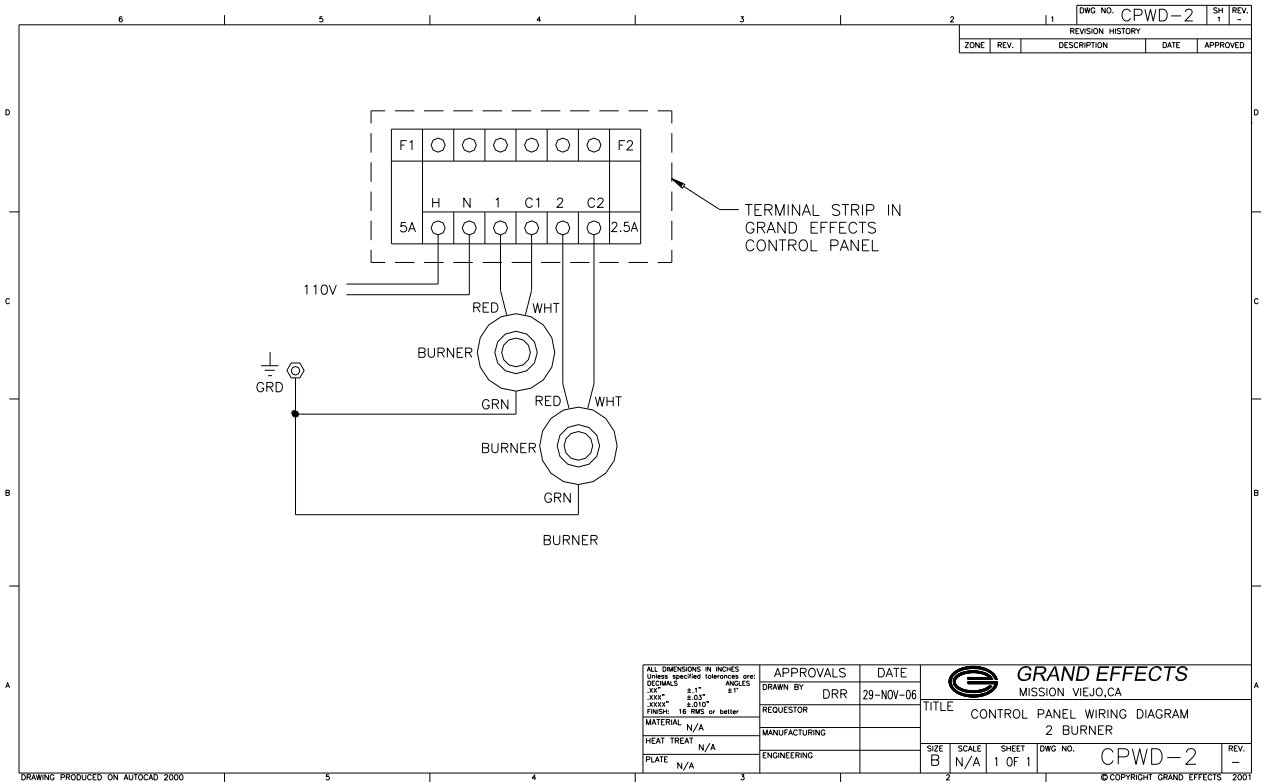

Dwg No. CPWD-2		SH	REV.
REVISION HISTORY			
ZONE	REV.	DESCRIPTION	DATE APPROVED

<small>ALL DIMENSIONS IN INCHES UNLESS SPECIFIED OTHERWISE USE: DECIMALS .125" ANGLES 45° .000" ±.01" ANGLES 90° DIMS. TO DIMS. or better MATERIAL N/A HEAT TREAT N/A PLATE N/A</small>	APPROVALS	DATE	GRAND EFFECTS MISSION VIEJO, CA			
	DRAWN BY DRR	29-NOV-06				
	REQUESTOR		TITLE			
	MANUFACTURING		CONTROL PANEL WIRING DIAGRAM 2 BURNER			
ENGINEERING		SIZE B	SCALE N/A	SHEET 1 OF 1	DWG NO. CPWD-2	REV. -

Grand Effects

1 year Limited Residential Warranty-6 Months Commercial

Grand Effects will replace, at its expense, any unit, which in normal use, has proven to be defective in workmanship or material, provided that the customer returns the product prepaid to Grand Effects with proof of product within one year and provides Grand Effects with reasonable opportunity to verify the alleged defect by inspection. Grand Effects will not be responsible for any asserted defect, which has resulted from misuse, abuse, repair or alteration. Under no circumstances will Grand Effects be liable for incidental or consequential damage resulting from defective products. This warranty is Grand Effects' sole warranty and sets forth the customer's exclusive remedy, with respect to defective products, all other warranties, expressed or implied, whether of merchantability, fitness for purpose or otherwise, are expressly disclaimed by Grand Effects. Grand Effects is not responsible for any injury or mishap related to misuse, abuse or lack of judgment choosing fire display locations.



Contact us at:

GRAND EFFECTS

16 Technology Dr. F#133

Irvine, CA 92618

Office: (949) 697-5270

Fax: (949) 625-8027

e-mail: info@grandeffectsinc.com

