

# Pool Valet Retro Instructions



Tip: Tap threaded retainer ring to loosen dirt and silt before turning the ring counter-clockwise.



Check 1 1/2" hole in bottom of Pool Valet body to ensure retro nozzle will drop into pipe.



If hole is blocked with glue or pipe shavings use a file or knife to trim until the Pool Valet Retro nozzle will fit into the pipe.



Use primer to clean inside of old Pool Valet body.



Use any PVC/PVC glue on Pool Valet body in pool and on Pool Valet Retro body to be installed.

## Pool Valet Ring/Body Repair

1. Drain Pool.
2. Remove Pool Valet nozzle.  
Tip: Tap threaded retainer ring to loosen dirt and silt before turning the ring counter-clockwise. By tapping the threaded ring, it is easier to remove.
3. Remove any broken parts of thread from from Pool Valet body.
4. Check 1 1/2" hole in bottom of Pool Valet body to ensure retro nozzle will drop into pipe.  
Note: If hole is blocked with glue or pipe shavings use a file or knife to trim until the Pool Valet Retro nozzle will fit into the pipe.  
Note: If the pipe is sch80 ream out with a 1 1/2" reamer.
5. Use primer to clean inside of old Pool Valet body.
6. Use any PVC/PVC glue on Pool Valet body in pool and on Pool Valet Retro body to be installed.
7. Install new Pool Valet Retro nozzle into body.  
Make sure Pool Valet Retro nozzle will slide up and down. If not, remove Pool Valet Retro nozzle and repeat step 4. Remove Pool Valet Retro nozzle to install after pool is filled.
8. Refill pool and start system.
9. Allow water valve to cycle to blow out debris that may have fallen into lines.
10. Install Pool Valet Retro nozzles with installation tool and pool pole.



# Pool Valet Retro Instructions



## Pool Valet Remodel



Tip: Tap threaded retainer ring to loosen dirt and silt before turning the ring counter-clockwise.



Check 1 1/2" hole in bottom of Pool Valet body to ensure retro nozzle will drop into pipe.



If hole is blocked with glue or pipe shavings use a file or knife to trim until the Pool Valet Retro nozzle will fit into the pipe.



Use primer to clean inside of old Pool Valet body.



Use any PVC/PVC glue on Pool Valet body in pool and on Pool Valet Retro body to be installed.

1. Drain Pool.
2. Remove Pool Valet nozzle.  
Tip: Tap threaded retainer ring to loosen dirt and silt before turning the ring counter-clockwise. By tapping the threaded ring, it is easier to remove.
3. Check 1 1/2" hole in bottom of Pool Valet body to ensure retro nozzle will drop into pipe.  
Note: If hole is blocked with glue or pipe shavings use a file or knife to trim until the Pool Valet Retro nozzle will fit into the pipe.  
Note: If the pipe is sch80 ream out with a 1 1/2" reamer.
4. Install red Pool Valet plaster caps into old Pool Valet bodies and resurface pool.  
Note: When resurfacing the pool at the same time as changing out the nozzles it is best to complete the resurfacing of the pool before installing the Pool Valet Retro nozzle bodies.  
Note: If Pool Valet Retro bodies are installed before resurfacing the pool be sure to protect inside of Pool Valet body from plaster or Pebble Tec slurry with a sponge or equivalent.
5. Use primer to clean inside of old Pool Valet body.
6. Use any PVC/PVC glue on Pool Valet body in pool and on Pool Valet Retro body to be installed.
7. Install new Pool Valet Retro nozzle into body. Make sure Pool Valet Retro nozzle will slide up and down. If not, remove Pool Valet Retro nozzle and repeat step 4. Remove Pool Valet Retro nozzle to install after pool is filled.
8. Refill pool and start system.
9. Allow water valve to cycle to blow out debris that may have fallen into lines.
10. Install Pool Valet Retro nozzles with installation tool and pool pole.



### NOZZLE REPLACEMENT CHART

Pool Valet	Pool Valet Retro
2-Hole	5/8
1-Hole	3/8
Step	1/4