















THE POOL SENTRY™ is used to maintain the water level of a pool, spa or pond automatically and unattended. When the Pool Sentry is removed from the box, it is easily assembled by threading the fill tube into the float valve. Snap the fill tube and float valve into the base and fill the base with small rocks or pea gravel. Next, snap the top cover onto the base and attach the garden hose (not included). Finally, adjust the float to the desired position.

The supply water stays on at all times when the Pool Sentry is in the pool. As the float drops, the water turns on. When the float reaches its set height, the water shuts off. The customer can adjust the float to any desired level, usually a point halfway on the tile line or skimmer.

Because the hose is under constant water pressure, it is essential that the customer uses a heavy-duty, reinforced hose. With a flyer in each box, we offer an aftermarket hose to the customers. It is rated to 200 psi working pressure and 750 psi burst strength.

FEATURES:

- Protects pool pump against burnout
- Maintains water level while on vacation
- Use for rental or vacant homes
- Fills pool after acid wash
- No tools required simply attach hose
- Controls level in leaking pools, ponds or spas
- Unattached operation
- COMPLETELY PORTABLE!

M-3000 POOL SENTRY™ - SHIPPING SPECIFICATIONS

	UPC CODE	PART NUMBER	PRODUCT DESCRIPTION	CASE PACK	ACTUAL WEIGHT	UPS SHIPPING WT.		CARTON CUBE	PALLET COUNT
	7-5770612510-9	M-3000	4 pack	4	16	16	16.5 x 15.8 x 12.5	1.90	36
	7-5770612510-9	M-3000	2 pack	2	7	7	16 x 14.25 x 8.25	1.09	72
	7-5770612510-9	M-3000-1	1 pack	1	4	4	16 x 12.5 x 4.25	.49	144
	N/A	HOSE25	25-Foot Hose	1	5	5	12 x 12 x 6	0.5	N/A

ROLA-CHEM CORPORATION / PARADISE INDUSTRIES

5858 CENTERVILLE ROAD, ST. PAUL, MN 55127-6804