

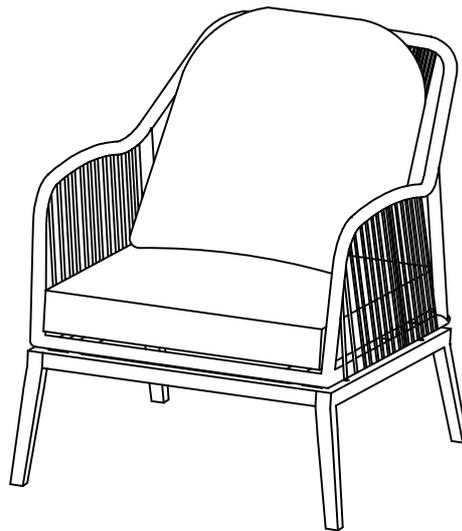
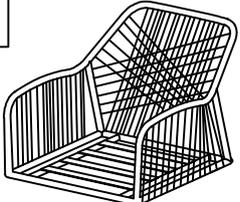
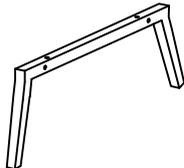
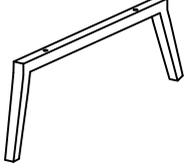







Outdoor Wicker Arm Chairs
CO7361

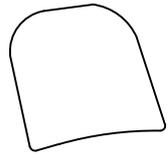

PART LIST


<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 
<p>Seat Panel 2 PCS</p>	<p>Left Leg 2 PCS</p>	<p>Right Leg 2 PCS</p>	<p>Seat Frame 2 PCS</p>
<p>E</p> 	<p>F</p> 		
<p>Seat Cushion 2 PCS</p>	<p>Back Cushion 2 PCS</p>		

HARDWARE LIST

<p>#1</p>  <p>1/4 "x1.4 "L</p>	<p>#2</p>  <p>1/4 "x2 "L</p>	<p>#3</p> 	<p>#4</p> 
<p>Short Bolt 8 PCS (Extra 1)</p>	<p>Long Bolt 8 PCS (Extra 1)</p>	<p>Flat Washer 16 PCS (Extra 1)</p>	<p>Allen Wrench 1 PC</p>

Step 1: Lay seat frame (part D) down on a soft flat surface, such as carpet, as shown below. Attach left leg (part B) and right leg (part C) to seat frame (part D) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).


Note : Please do not fully tighten bolts until unit is fully assembled.

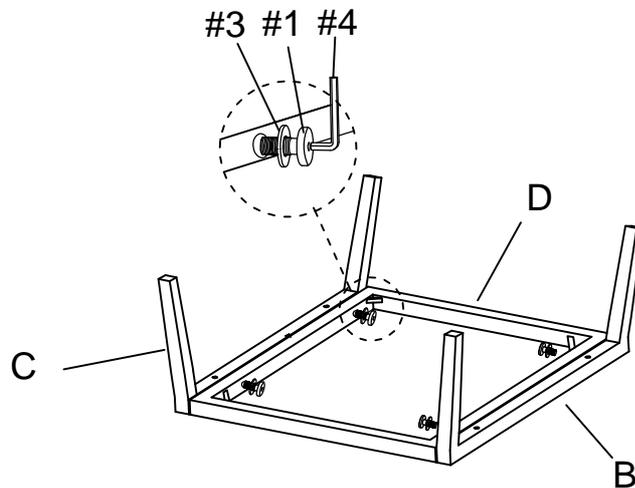

- #1  x 4
- #3  x 4
- #4  x 1

Step 2: Attach left leg (part B) and right leg (part C) to seat panel (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

Note : Please fully tighten all bolts at this time.

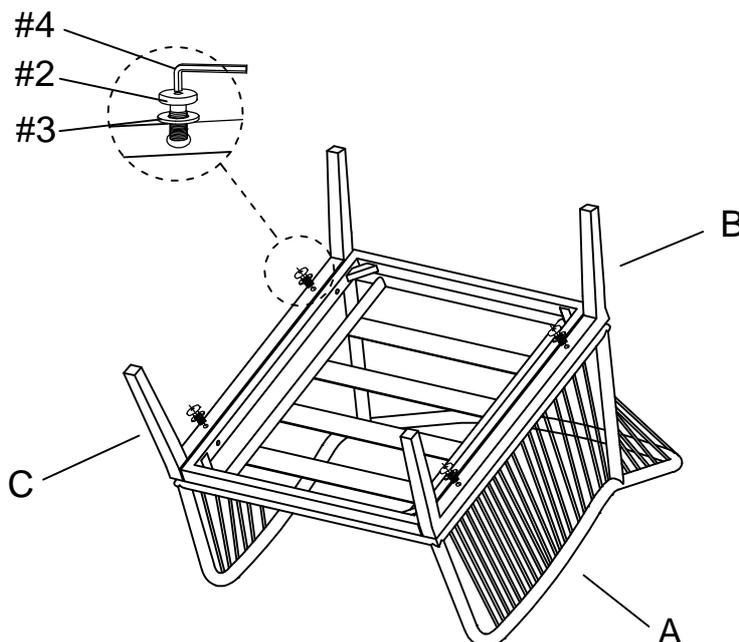

- #2  x 4
- #3  x 4
- #4  x 1

Step 3: Carefully turn unit upright. Place seat cushion (part E) and back cushion (part F) as shown below. Repeat steps 1-3 to assemble remaining chair.

