
RAIL FIT GUIDE

This Rail Fit Guide is to help you choose the right cover for your rail. Begin the installation by measuring 4 to 6 inches above waterline back to the deck or desired length.

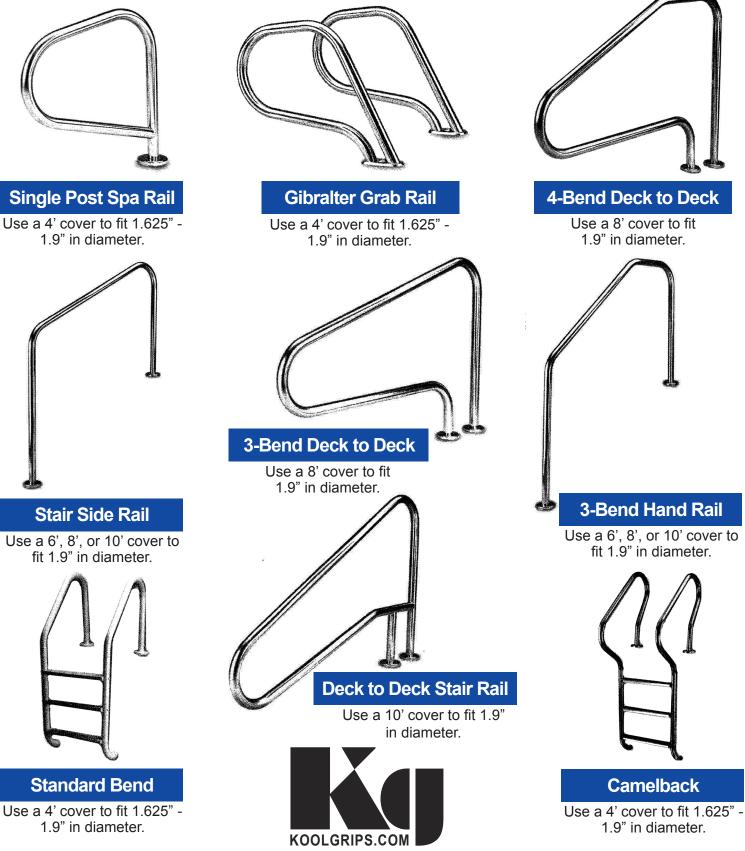

KoolGrips Products LLC • 7662 East Gray Road, Suite 102 • Scottsdale, AZ 85260 • (480) 483-5416 • Fax: (480) 483-5632 email: sales @koolgrips.com • www.koolgrips.com