AquaLight & Return Water Flow For Above Ground Pools

IMPORTANT SAFETY INSRTRUCTIONS READ AND FOLLOW ALL INSTRUCTIONGS SAVE THESE INSTRUCTIONS

Table of Contents

SECTION I.	IMPORTANT SAFETY INSTRUCTIONS
SECTION II.	INSTALLATION
SECTION III.	REPLACING

AWARNING

Before installing this product, read and follow all warning notices and instructions accompanying this light. Failure to follow safety warnings and instructions can result in severe injury, death, or property damage.

Important Notice

Attention Installer.

This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

SECTION I. IMPORTANT SAFETY INSTRUCTIONS

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following.

- 1. This light can be installed on storable above ground or permanent above ground pools.
- 2. A storable pool has a maximum water depth of 42 inches and is so constructed that it may be readily disassembled for storage and re-assembled to its original integrity.
- 3. A permanent pool has a maximum water depth of over 42 inches. Do not install on therapeutic pools, hydro-massage bathtubs, spas or hot tubs.
- 4. To reduce the risk of electric shock, if any cord becomes damaged, return the entire transformer assembly for repair or replacement.
- 5. Risk of entrapment, injury or death. Use plumbing passageways only to return water to pool. Do not use as a suction device.
- 6. Risk of electrical shock. Connect only to a grounding type circuit protected by a ground fault circuit interrupter (GFCI). Contact a licensed electrician if you cannot verify that the receptacle or circuit is protected by a GFCI. Do not use an extension cord.
- 7. Locate your pool so that the wall is at least 10 feet from all electrical receptacles and at least 20 feet from all receptacles not protected by a GFCI. It is also very important to locate the pool so that it is not under any electrical wiring that is less than 18 feet vertically above the pool wall and within an area located 10 feet outside the pool walls. The pool must also never be located under any lighting fixture or within five (5) feet measured horizontally from any fixture mounted less than five (5) feet vertically above the pool water level.
- 8. Risk of injury. Install the top of the lens with a minimum of 8 inches and a maximum of 10 inches below top of pool wall or in manufacturer's pre-punched return fitting hole.
- 9. Do not use electrical equipment within 10 feet of pool wall unless specifically U.L. listed for that use.

AWARNING



Risk of electric shock. Disconnect power before servicing this unit .Failure to disconnect power can result in death or severe personal injury. **CONNECT ONLY TO A CIRCUIT PROTECTED**BY A GFCI. Failure to do so can result in serious personal injury and /or death.

SECTION II. INSTALLATION


For existing pool


Drain water level to be below the returning fitting


1. Unscrew the light assembly head from the threaded wall flange. See figure 2


Warning: Please do not open the light assembly head. Open the head would avoid the warranty.


- 2. Remove the existing eyeball fitting including eyeball, eyeball nut & eyeball base from the return fitting on your pool wall See Figure 3
- 3. Screw the light assembly head in the threaded wall flange. Make sure the big rubber gasket is installed to prevent the damage to the line. See Figure 4
- 4. Connect the special connecting fitting to the light assembly head see figure and make sure an o-ring is installed and screw it tight enough to prevent any leaking. See Figure 4
- Disconnect the clamp on the hose.
 Unscrew the hose adaptor from the existing fitting and screw to a special connecting fitting see figure See Figure 5
- 6. Connect the hose to the hose adaptor.
- 7. Connect the quick wire connection as Figure 7
- 8. Mount the transformer on the vertical wall.
- 9. Plug the power cord's 3-prong plug into an appropriate 110V GFCI protected receptacle at lease 10 feet from the pool.
- 10. If the light is not on, press the switch below the transformer case. See Figure 8

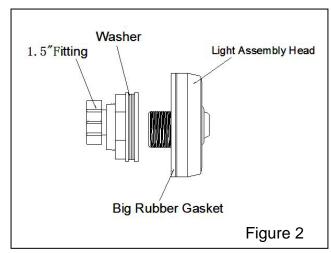

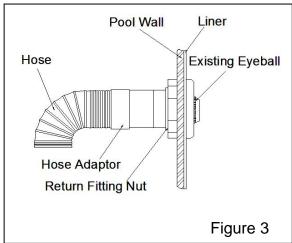

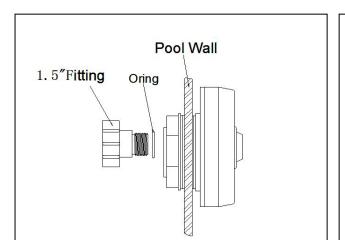

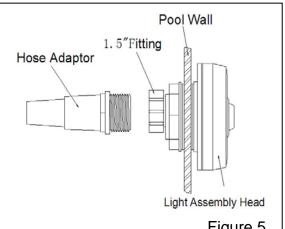

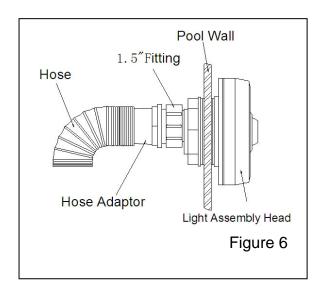

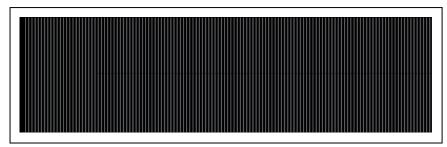
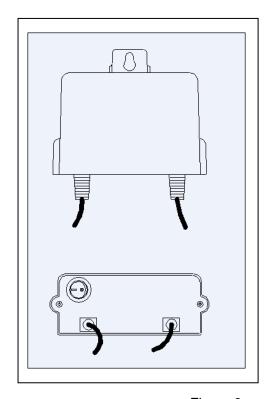


Figure 7



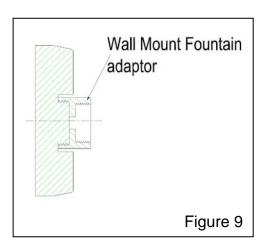


Figure 8

For the wall mount fountains, please remove the eyeball and use the fountain

adaptor as Figure 9

For new pool

This light could be used as the returning fitting. Install the wall flange, gasket and octagonal nut as usual. See Figure

Install the light following above procedure from step 3 to 11.

SECTION III REPLACING

When the LED failed

Disconnect the quick connector on the wire and unscrew the light assembly head from the wall flange and install a new one.

Warning: Please do not open the light assembly head. Open the head would avoid the warranty.

When the transformer failed

Disconnect the quick connector on the wire and install a new transformer.

SECTION IV STORAGE AND WINTERIZING INSTRUCTIONS

- 1. It is common practice to drain the water level to a point below the skimmer and the light, for winterizing
- 2. **For storable pools:** remove power from the unit by taking the power cords' three-prong plug and disconnecting it from its electrical outlet.
 - For permanent pools: turn off all electrical power supplying the light circuit at the main circuit breaker.
- 3. Disconnect the quick connector on the wire and unscrew the light assembly head from the wall flange and store it for next season.

SECTION V TECHNICAL DATA

