



INLINE HEATER

INSTALLATION, OPERATION AND MAINTENANCE

MODELS:

ILS SERIES
1.5kW
120V SINGLE PHASE

BEFORE YOU BEGIN

CHECK ALL ELECTRICAL CONNECTIONS TO ALL COMPONENTS WITHIN THE HEATER FOR TIGHTNESS. CONNECTIONS CAN BECOME LOOSE DURING SHIPMENT AND HANDLING.

CAUTION

THE ELECTRICAL INSTALLATION MUST BE IN ACCORDANCE WITH ARTICLE 680 OF THE NATIONAL ELECTRICAL CODE.

WARNING

Only qualified personnel, as defined by National Electric Code Article 100, should install and maintain this equipment. Unauthorized alteration or improper maintenance of this unit may release the manufacturer from any warranty claims. The installation must be in accordance with the instructions in this manual and applicable local plumbing and electrical codes.

1.0 DESCRIPTION

Coates Spa Heaters are intended for use on spas or hot tubs having a forced water circulation system.

The water flow through the heater should be at least 15 GPM but should not exceed 80 GPM. Higher flow may damage the heater. An external bypass should be installed to limit the flow to within this range.

2.0 INSTALLATION

WARNING

Only qualified personnel, as defined by National Electric Code Article 100, should install and maintain this equipment. Unauthorized alteration or improper maintenance of this unit may release the manufacturer from any warranty claims. The installation must be in accordance with the instructions in this manual and applicable local plumbing and electrical codes.

CHECK ELECTRICAL CONNECTIONS TO ALL COMPONENTS within the heater for tightness. These can become loose during shipment and handling.

2.1 PHYSICAL PLACEMENT

CAUTION

THE ELECTRICAL INSTALLATION MUST BE IN ACCORDANCE WITH ARTICLE 680 OF THE NATIONAL ELECTRICAL CODE (NEC).

The Coates Spa Heater is suitable for indoor installation. See Figure 1 for piping connections and Figure 2 for electrical connections. **Leave minimum clearance of 4 inches on the top for element removal and service access.**

2.2 ELECTRICAL INSTALLATION

The electrical supply power must be single phase, 2 wire, 120 VAC. The supply must be protected by a ground fault circuit interrupter (GFCI) in accordance with NEC Article 680. An electrical disconnect with over-current protection must be provided. An insulated ground conductor must be provided. See Figure 2 for electrical connections. A lug has been provided for attachment of the BONDING wire per the NEC Article 680-22, (a)(4). This lug is located next to the conduit entrance.

** NOTICE **

NO PRESSURE RELIEF VALVE IS SHIPPED WITH THIS HEATER AND NONE IS REQUIRED PER UL STD 1261. DO NOT INSTALL SHUT OFF VALVE BETWEEN THE HEATER AND POOL OR SPA. A CHECK VALVE IS ACCEPTABLE AND IN ACCORDANCE TO UL STD 1261 REVISED JULY 1983.

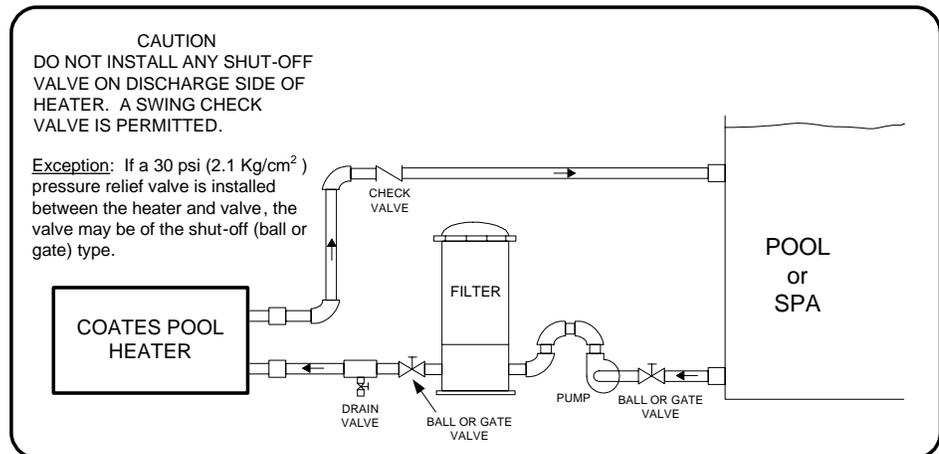


FIGURE 1 – PIPING DIAGRAM

3.0 HEATER CONTROLS

The heater has a temperature controller adjustable from 70°F to 104°F, one manual reset type high temperature limit switch set at 118°F and a pressure switch to prevent operation of heater without water flow.

3.1 CAUTIONS AND WARNINGS

1. Be sure to check all cautions and warnings in this manual and as displayed on the heater labels before operating or performing and maintenance on these heaters.
2. Do not remove the heater cover while electrical power is applied to the heater. Power must be interrupted at the heater supply circuit breaker or disconnect switch.
3. The MIN setting on the temperature control dial is an OFF position. The heater will not operate at this setting regardless of water temperature.

3.2 STARTING THE HEATER

- CAUTION -

Do not operate heater without water.

1. Ensure that heater case is properly grounded, and bonded.
2. Fill the system with water and start the circulating pump.
3. Turn on electrical power at the heater supply circuit breaker.
4. Set the temperature control to desired water temperature and adjust accordingly after the temperature has stabilized. DO NOT EXCEED 104°F.

3.3 PRESSURE SWITCH ADJUSTMENT

The pressure switch, as factory set, may provide proper operation for many installations. If the heater is installed above or below the level of the spa or if a two speed pump is used the pressure switch may need to be adjusted for proper operation.

POWER SUPPLY TO THE HEATER MUST BE OFF WHEN ADJUSTMENTS ARE MADE.

Verify correct operation of switch by:

1. If pump has two speeds, set at low speed.
2. Turn on pump and then turn on heater. If the flow light turns on, the pressure switch is closing.
3. Turn pump off while watching flow light. The light should turn off within 5 seconds, if it does not, restart pump immediately.

If the light turns on and off with the pump, no further adjustment is necessary.

If the switch is closed (light on) with the pump off, turn the thumb knob clockwise (increase pressure) until the switch opens.

If the switch is open (light off) with the pump on, turn the thumb knob counter-clockwise (decrease pressure) until the switch closes.

3.4 STOPPING THE HEATER

Turn off electrical power at the heater supply circuit breaker before stopping the circulating pump.

4.0 MAINTENANCE

1. Keep the heater clean.
2. If high temperature causes the limit thermostat to cut off the electrical power, turn off power at disconnect switch and determine the cause before resetting the switch. A water temperature drop is required to allow resetting of the manual reset high temperature limit.
3. If leaks develop in the heater or connecting piping, shut down the heater and repair defective connections.
4. If heating elements are removed for replacement, use only Coates elements.

5.0 OPERATION SEQUENCE

1. Power supplied to heater (Circuit Breaker).
2. Pressure switch closes (with sufficient flow from pump).
3. Rotate temperature dial until it is greater than water temperature.
4. Element light illuminates and the element heats the water.

MODEL 1.5ILS

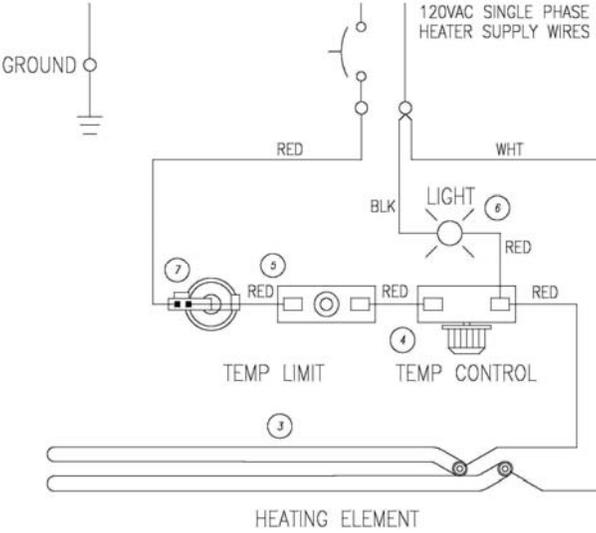


FIGURE 2 – WIRING DIAGRAM

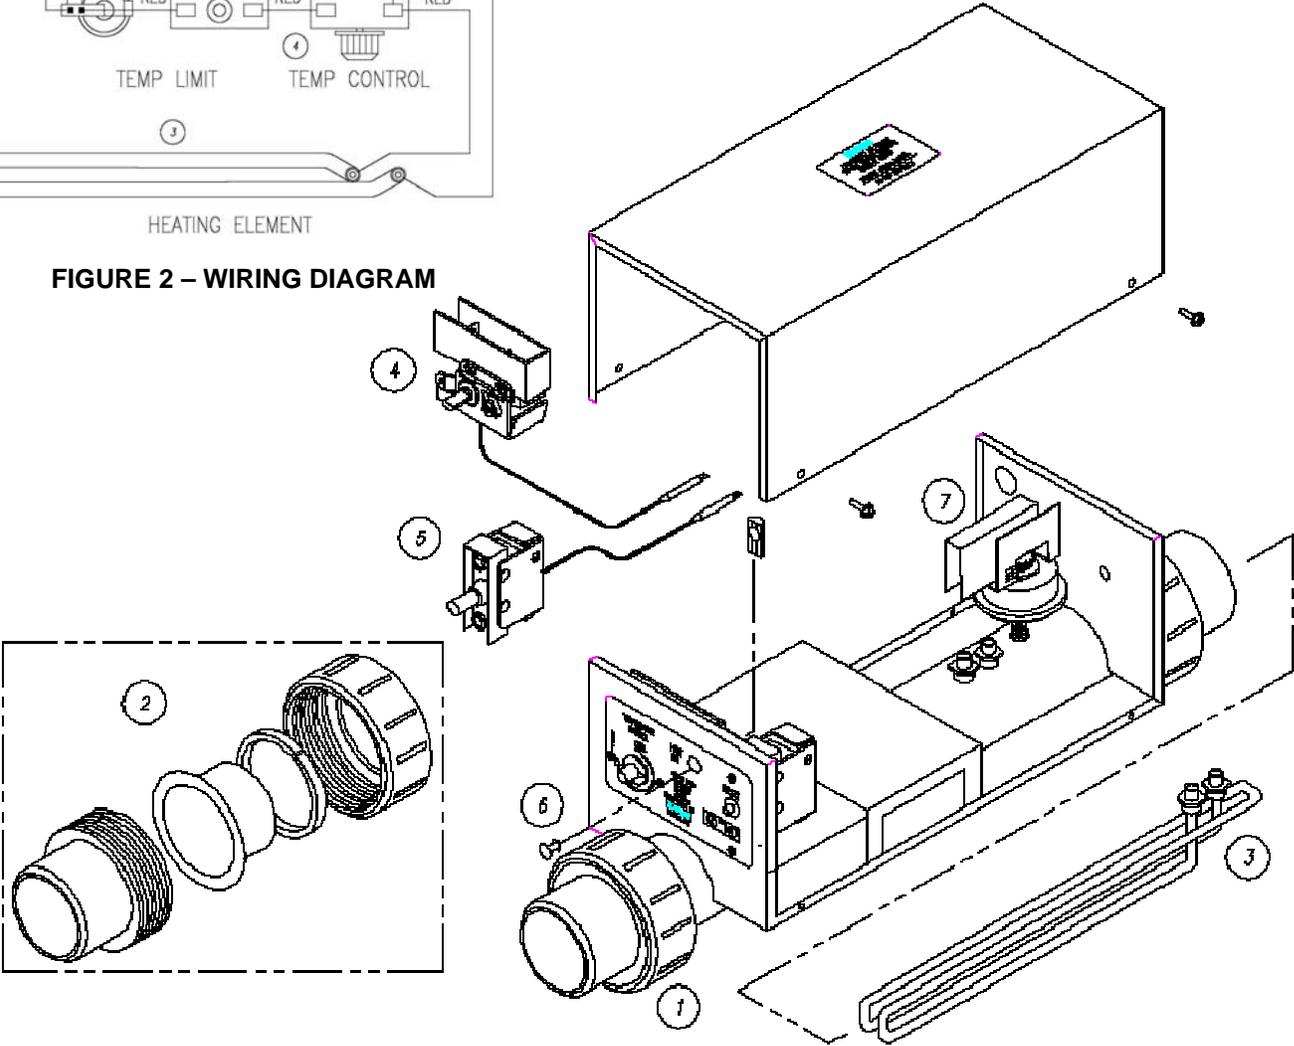


TABLE 1

ITEM	PART NUMBER	DESCRIPTION	QTY
1	62002616	SS VESSEL WITH HEATING ELEMENT AND UNIONS	1
2	32705020	PVC UNION ASSY W/TAIL, NUT, RETAINER AND GASKET	2
3	20005116	HEATING ELEMENT, 1.5kW 120VAC	1
4	22002001	TEMPERATURE CONTROL	1
5	22003820	HIGH TEMPERATURE LIMIT, MANUAL RESET	1
6	29034620	PILOT LIGHT for ELEMENT	1
7	32705010	PRESSURE SWITCH, 1-5 PSI	1

When ordering parts from your dealer, provide the model number and serial number of your heater.

LIMITED WARRANTY

The company extends this limited warranty to the original purchaser of a Coates Electric Spa Heater.

Coates warrants the electrical components* and wiring (excluding enclosure, enclosure parts, knobs and accessories) in this new Spa Heater to be free from defects in materials and workmanship for one (1) year from the provable date of purchase, or eighteen (18) months from date of factory shipment, whichever occurs first. Coates further warrants the stainless steel water containment vessel to be free from defects in materials and workmanship for two (2) years from the provable date of purchase or thirty (30) months from the factory shipment, whichever occurs first. Enclosure, enclosure parts, knobs and accessories have no warranty whatsoever.

*Exception: Factory installed heating elements are warranted for ninety (90) days from the date of heater installation, or one (1) year from date of factory shipment, whichever occurs first.

COATES will repair or replace at its option, defective component parts as explained above, during the warranty period provided such parts are returned to the factory, freight prepaid. Factory authorization **MUST BE OBTAINED** under this warranty before returning such defective parts.

Limited Warranty Does Not Cover

1. New products purchased outside the United States of America and Canada.
2. Uncrating, unpacking, set-up, installation and / or startup of this unit.
3. Adjustments to controls normally operated by consumer, purchaser or installer.
4. This limited warranty does not extend to any defect, malfunction or failure caused by, or resulting from improper service, maintenance or repair, abuse, neglect, accident, **corrosion caused by improper water chemistry or by equipment that use salt to create a sanitizer**, lack of water, or any other cause beyond the control of Coates Heater Company, Inc. or to any product where the nameplate shall have been removed, altered, replaced, defaced or rendered illegible.
5. This limited warranty is void if the Heater is used in a salt water system or under any extreme or unusual corrosive condition for which stainless steel metals would not be recommended.
6. This limited warranty does not extend to the repair or replacement of defective components except at COATES or a service facility authorized by COATES

IMPLIED WARRANTIES, WHEN APPLICABLE, SHALL COMMENCE UPON THE SAME DATE AS THE EXPRESS WARRANTY PROVIDED ABOVE, AND SHALL, EXCEPT FOR WARRANTIES OF TITLE, EXTEND ONLY FOR THE DURATION OF THE EXPRESS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THE ONLY REMEDY PROVIDED TO YOU UNDER AN APPLICABLE IMPLIED WARRANTY AND THE EXPRESS WARRANTY SHALL BE THE REMEDY PROVIDED UNDER THE EXPRESS WARRANTY, SUBJECT TO THE TERMS AND CONDITIONS CONTAINED THEREIN.

COATES SHALL NOT BE LIABLE FOR INCIDENTAL AND CONSEQUENTIAL LOSSES AND DAMAGES, UNDER THE EXPRESS WARRANTY, ANY APPLICABLE IMPLIED WARRANTY, OR CLAIMS FOR NEGLIGENCE, EXCEPT TO THE EXTENT THAT THIS LIMITATION IS FOUND TO BE UNENFORCEABLE UNDER APPLICABLE STATE LAW.

SOME STATES DO NOT ALLOW THE EXCLUSION OF LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.



HEATER COMPANY, INC.

P.O. Box 1750
Kent, WA 98035

11/08